


ROOF DRAIN

TERANAP / PARAGREEN XF PRE-GROWN VEGETATED MAT SYSTEM

CONCRETE SUBSTRATE

OVERHEAD VIEW

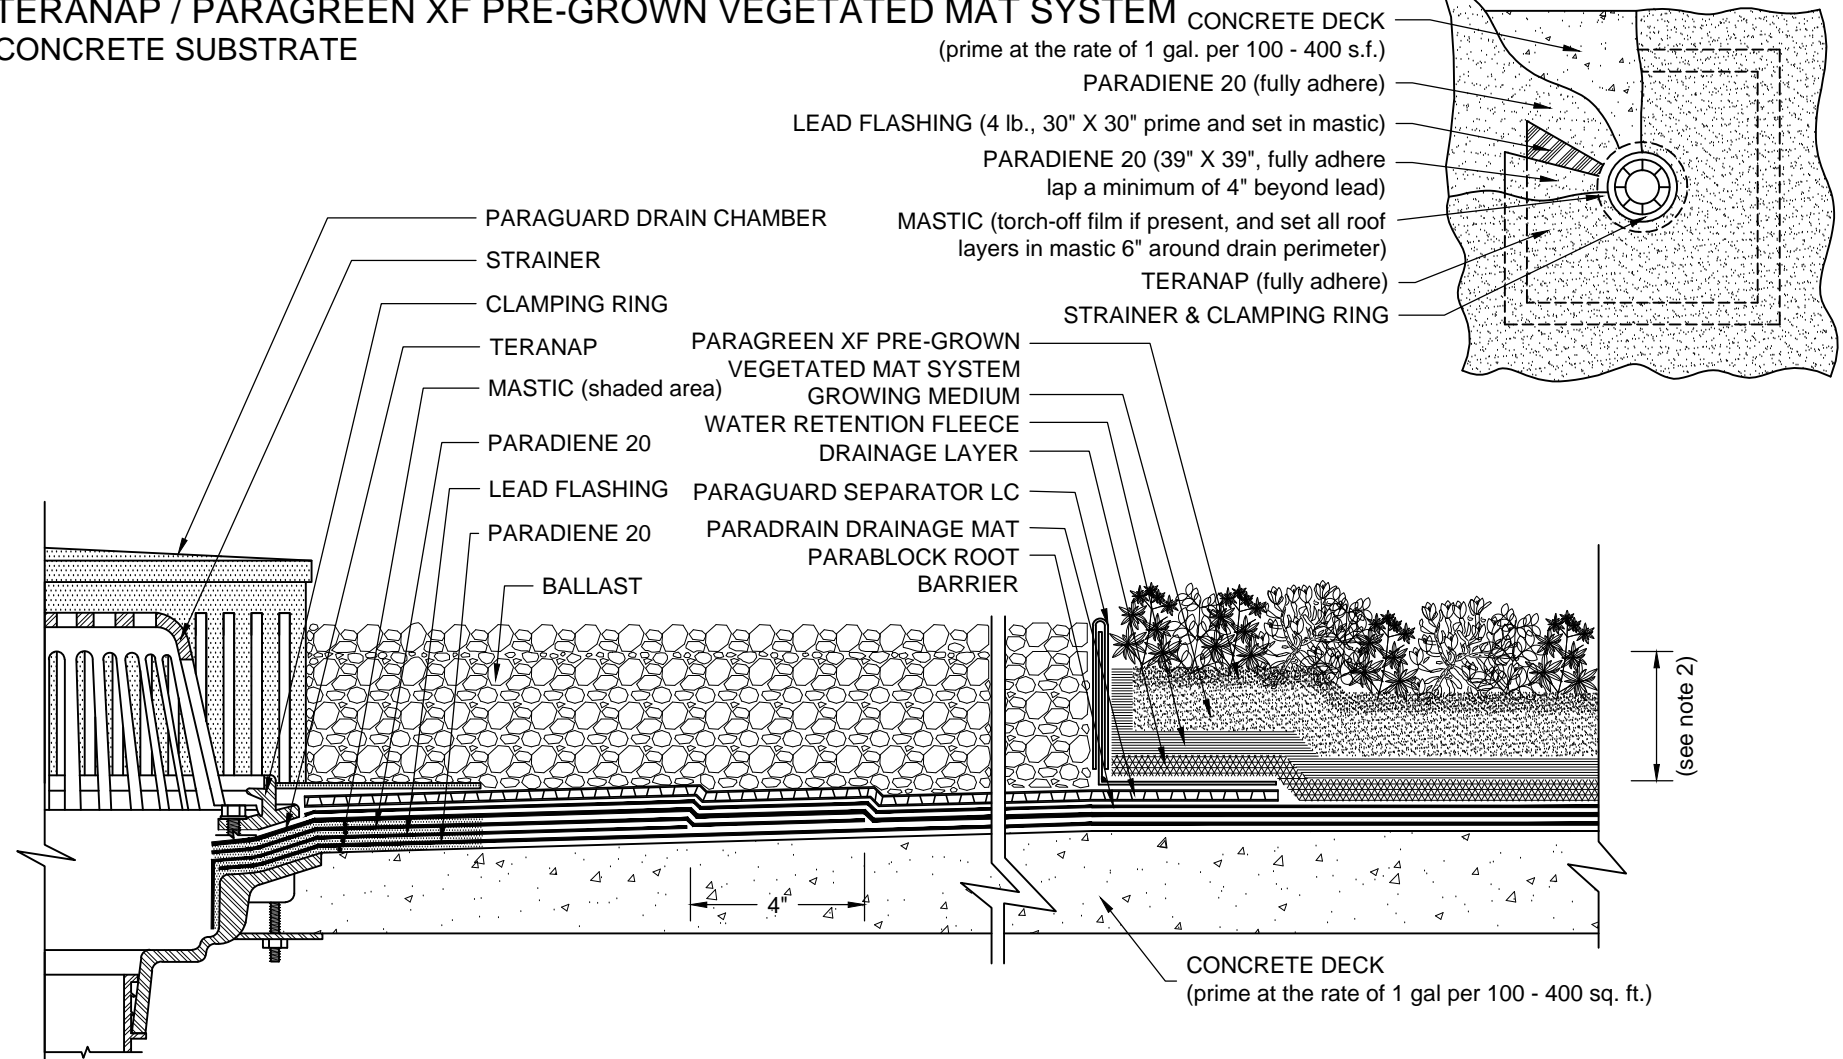

NOTES:

1. WHERE PRIMER IS INDICATED PA-1125, PA-917 LS, OR TA-119 PRIMER ARE REQUIRED TO MAINTAIN PROPER ADHESION. TA-119 IS REQUIRED FOR ALL PARADIENE 20 SA FLASHING REINFORCING AND STRIPPING PLY APPLICATIONS. CONTACT SIPLAST FOR SPECIFIC REQUIREMENTS.
2. THE VEGETATED ROOF ASSEMBLY AND BALLAST ARE SHOWN FOR REFERENCE PURPOSES ONLY. THE DIMENSIONS OF THE BALLASTED AREAS WILL VARY ACCORDING TO SPECIFIC BUILDING DIMENSIONS, CURRENT INSULATION, GROWING MEDIUM, PRE-VEGETATED MAT, PERIMETER COMPONENTS, IRRIGATION, AND MAINTENANCE GUIDELINES.
3. ROOF DRAIN COMPONENTS AND INSTALLATION GUIDELINES ARE SUPPLIED BY THE DRAIN MANUFACTURER.
4. PA-1021 PLASTIC CEMENT IS REQUIRED WHERE MASTIC IS INDICATED.
5. DISSIMILAR METAL TYPES SUBJECT TO ELECTROLYTIC REACTION SHOULD BE PHYSICALLY SEPARATED.
6. REQUIREMENTS AND RECOMMENDATIONS DETAILED IN CURRENT SIPLAST SPECIFICATIONS SHALL APPLY IN ADDITION TO THE ABOVE DRAWING.

CAUTION: SIPLAST RECOMMENDS THAT ALL PRACTICES PERTAINING TO NRCA CERTA GUIDELINES BE FOLLOWED WHEN TORCHING METHODS ARE EMPLOYED. THIS INCLUDES PERFORMING A FIRE WATCH FOLLOWING ANY TORCH APPLICATIONS. ALWAYS HAVE APPROVED FIRE-EXTINGUISHING EQUIPMENT NEARBY.

N.T.S