


WASTE STACK/PIPE PENETRATION PARASOLO PVC ROOF MEMBRANE - RIGID INSULATION (ALL SYSTEMS)

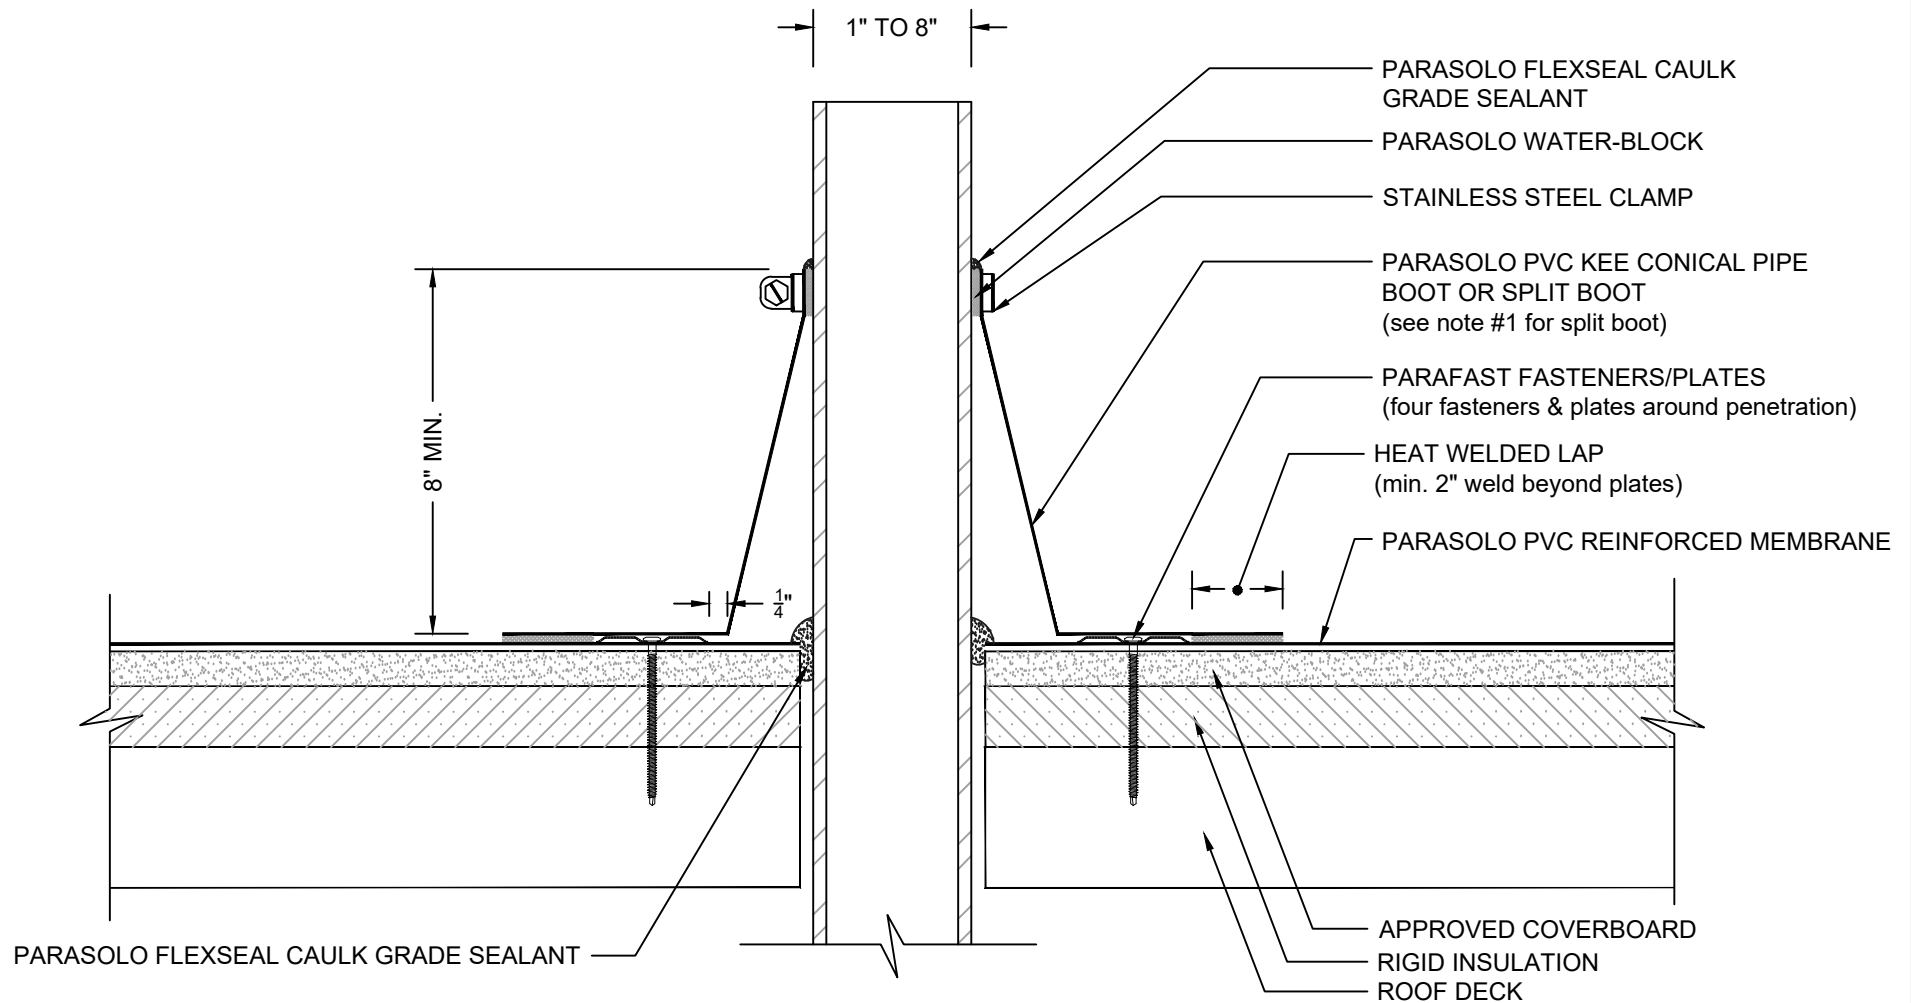

NOTES:

1. IF PLATES AND FASTENERS ENCROACH INTO THE SEAM AREA OF THE POCKET, A TARGET MUST BE ADDED FIRST TO COVER FASTENERS.
2. REQUIREMENTS AND RECOMMENDATIONS DETAILED IN CURRENT SIPLAST SPECIFICATIONS SHALL APPLY IN ADDITION TO THE ABOVE DRAWING.

N.T.S