


TERANAP PLAZA DECK

ASPHALTIC PAVEMENT SURFACING

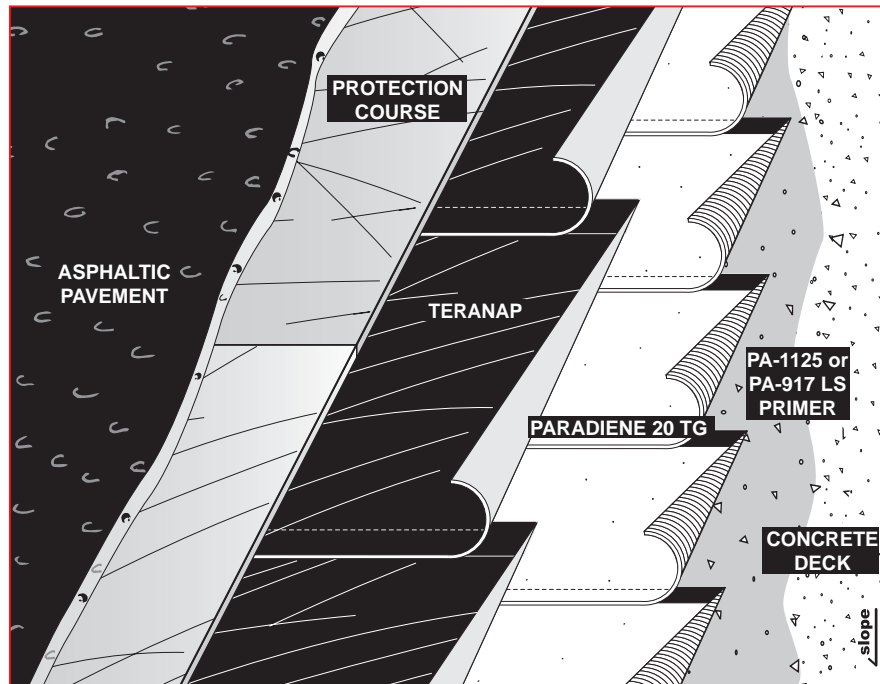

SLOPE 0" - 1/2" per ft*

MATERIALS per 100 sq ft

PA-1125 or PA-917 LS PRIMER 1 gal
PARADIENE 20 TG 76 lb
TERANAP 105 lb
PROTECTION COURSE
ASPHALTIC PAVEMENT

* Contact Siplast for higher slope requirements.

n.t.s.

Requirements and recommendations detailed in the Siplast catalog and Siplast long form specifications shall apply in addition to the following recommendations and specifications.

Application

1. Prime the entire deck using PA-1125 or PA-917 LS Primer and allow the primer to dry thoroughly.
2. Beginning at the low point of the roof, fully torch one ply of Paradiene 20 TG to the primed substrate, lapping sides and ends a minimum of 3 inches. Offset end laps a minimum of 3 feet.
3. Beginning again at the low point of the roof, fully torch one ply of Teranap to the Paradiene 20 TG surface, lapping sides and ends a minimum of 6 inches. Offset end laps a minimum of 3 feet. Stagger laps between plies.
4. Install the approved protection course dry over the Teranap surface according to the protection course manufacturer's specifications and recommendations.
5. Install the approved asphaltic pavement surfacing over the protection course surface according to the project specifications and local building code requirements.

Note: Teranap is manufactured in both 1 meter and 2 meter widths. The Teranap weight shown above is a minimum weight for standard 2 meter wide Teranap. Contact Siplast for weights on other Teranap finish plies.

Caution: Siplast recommends that all practices pertaining to NRCA CERTA guidelines be followed when torching methods are employed. This includes performing a fire watch following any torch applications. Always have approved fire-extinguishing equipment nearby.

Ref. #: P20-tg Tnap Concrete Protect-bd Asphalt-pave
Rev. 10.13.11